

# Penntek Transport Cover

Copyright 2025 Michael Aiello N2HTT, all rights reserved. Rev A 21-January-2025

## Hardware Supplied

Self-adhering Velcro Strap



**No tools are required for the assembly of the transport cover.**

## Assembly Instructions


Please read and review all of the instructions before starting the assembly of your cover.

1. Lay the transport cover halves face down on a flat surface, with the bottoms facing each other.  
If you do not have a rear cover, place the front cover face down with the bottom on the right side.




- With the Velcro strap oriented so you can read the logo, thread it **up** through the **bottom** loop of the front cover.


If you have a rear cover as well, thread the strap **down** through the **bottom** loop, and **up** through the **top** loop.

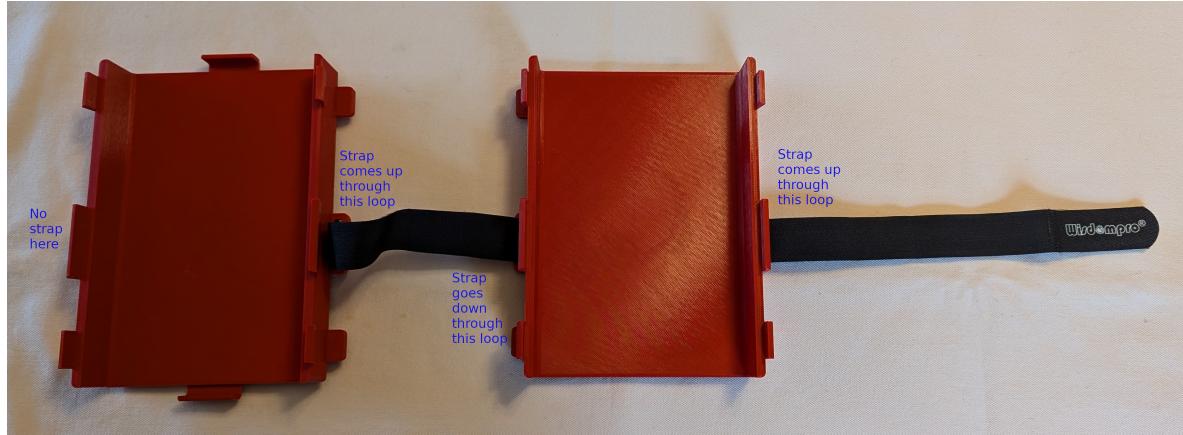

- Place the rig over the strap, between the two halves, with the front facing left. Bring the halves up and fit them on the front and rear of the rig. The front has guides that sit over the metal rails. Thread the strap under the handle and through the top loop of the front cover.

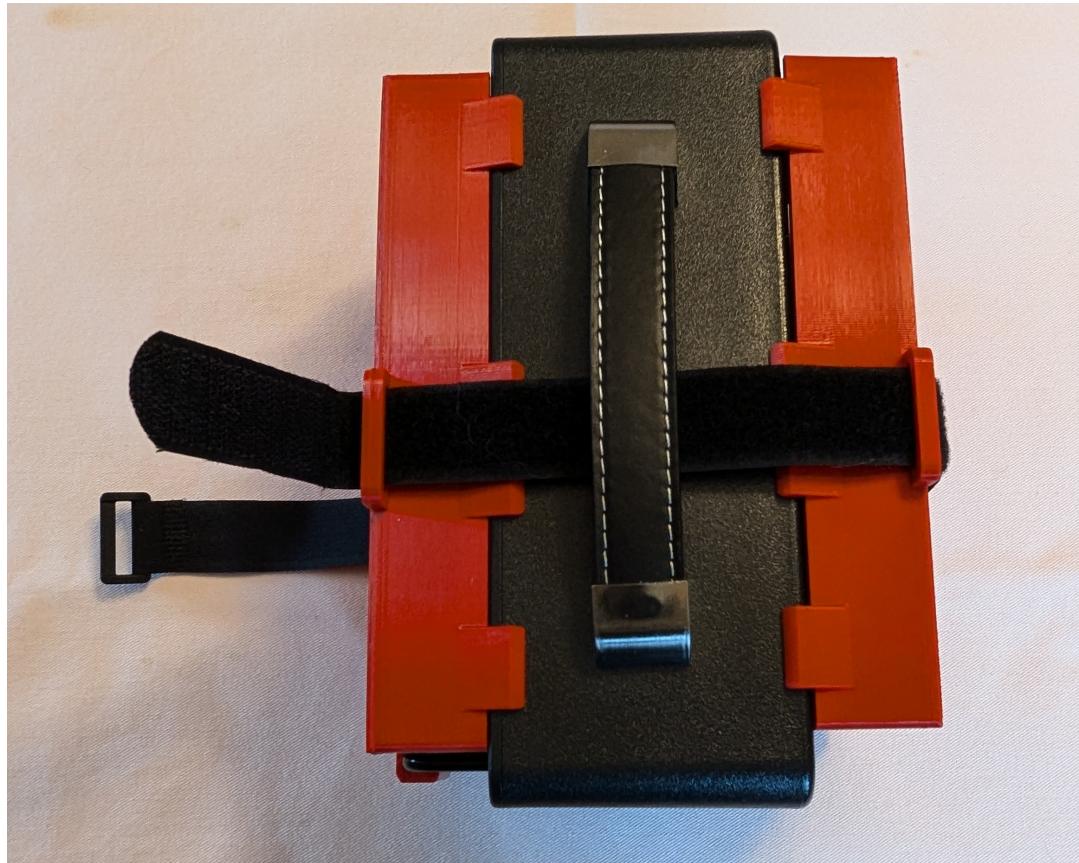

4. **If you only have a front cover**, fit it to the rig and bring the strap under the handle and through the top loop of the front cover.

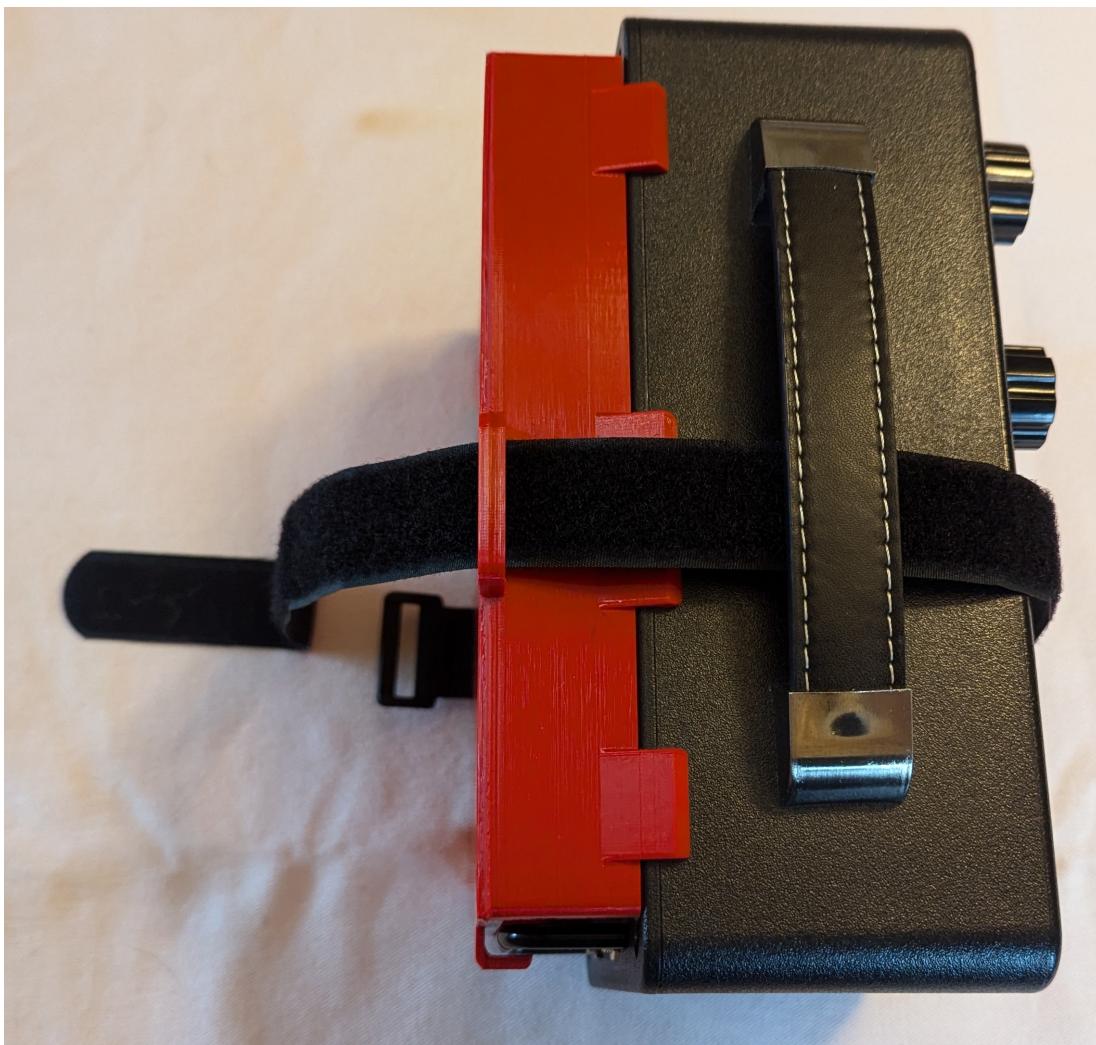

5. Secure the self-adhering Velcro strap across the front cover. You're now ready to travel!

